



20' x 30'

TRIPLE

CANOPY

 


- 2 Center Poles (8 Sections each)
- 10 Side/End Poles (20 Sec-

Area must be free of overhead tree limbs and electrical wires. Call MISS DIG 4 to 14 days prior to installation to mark underground pipes and wires. Also mark sprinkler systems. Evacuate during high winds and electrical storms.

It is the renter's responsibility to set up tent correctly and securely.

1. SPREAD OUT TENT AND ROPES. DRIVE STAKES 5 FT. OUT FROM EDGE OF TENT. TWO AT EACH CORNER, ONE AT EACH SIDE POLE POSITION.
2. FASTEN ROPES TO STAKES LEAVING LOOPED END AND ABOUT 7 FT. OF SLACK.
3. SET UP TWO PIECE SIDE POLES WITH TIPS THROUGH GROMMETS. ANGLE POLES AT ABOUT 45 DEGREES. (SEE 3A & 3B)
NOTE: ALL GUY ROPES MUST BE OVER POLE TIPS.
4. SET UP CENTER POLES. MATCH THE COLORS TO ASSEMBLE CENTER POLES. BE CERTAIN SNAP BUTTONS ARE SECURED.
5. INSERT STAKES NEAR EACH CENTER POLE.
6. PUSH SIDE POLES TO VERTICAL. ADJUST AND TIGHTEN GUY ROPES. (SEE 6A & 6B)
7. SMALL DIAMETER CORD IS ATTACHED TO CENTER RINGS AND STAKED STRAIGHT DOWN.
8. WHEN TAKING DOWN TENT, MAKE SURE ALL TAPE OR TAPE RESIDUE IS REMOVED BEFORE ROLLING UP. (SEE 8A & 8B)

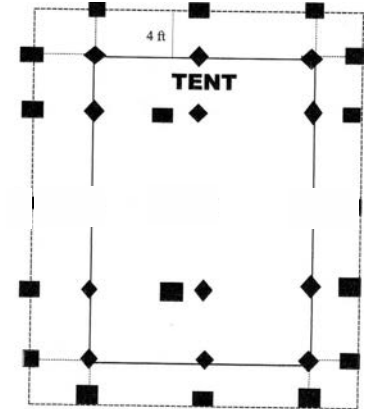

3 A



 
3 B



6 A



6 B

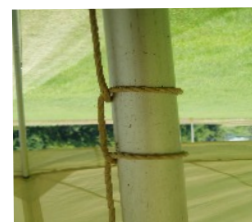

8 A



8 B

\$75 CLEANING FEE IF RETURNED WET OR DIRTY!

IF YOU RENTED SIDES:

Installing Sides:

Clip side to the rope that goes around the top inside of the tent (just above the tent scallops.)
Secure the velcro straps (found on the end of the sides) tightly around the corner tent poles.

Take Down:

Be sure sides are dry! Using 2 people to prevent from dropping the sides onto wet/muddy ground, unclip and fold in mid-air



Windows are in 30' side panels only.