

# 30 Foot Obstacle Course



## YOU WILL RECEIVE:

- ☐ 2 - 1.0 H.P. Blower Motors, drawing 10-15 amps each
- ☐ Rolled up inflatable ☐ with straps
- ☐ (6) Stakes & Ropes (if on grass)  
Call "MISS DIG" 811 before pounding stakes.
- ☐ If on asphalt, 4 Buckets/weights & tarp.
- ☐ 2 -12 gauge extension cord,  
\$75.00 fee each if not returned.
- ☐ \$75 cleaning fee IF returned Wet/Muddy



## YOU NEED:

- 2 Dedicated 15 amp circuits.
- Sledge Hammer
- Adult operator who enforces all rules.

**NEVER**

**Set up or operate  
in rain, winds over 15-20  
mph, or in temperatures  
less than 40°!**

**SAFETY  
FIRST!**



**FUN  
SERVICES**

675 E. Capital Ave. • Bellevue, MI 49021 • 1-800-772-7587

## Installation and Set-Up

Area must be dry and free of debris (ie: sticks, stones, broken glass, etc.)

Position on a flat area approximately 35' x 20'

Unroll - you will be unrolling from the back to the front.



Your unit has a zipper on bottom (side) be sure to close when inflating!  
(Open to deflate.)

### Obstacle Course must be anchored!

Hammer ASTM approved stake into ground and then tie strap from unit to anchor.

Stake should be within 12 inches from unit to prevent tripping. Stake should be 75% buried at no more than a 30 degree angle.

To test anchor, pull up with a firm lifting force to assure it is secure.

Insert blower in either tube, it doesn't make any difference. Use the tube that is closer to the power source, maximum of 50 feet. Tie off the other tube securely. (If not tied already)



Turn on blower and leave running for period of use.  
(inflation takes about 5 minutes)

## Proper Deflation and Return

Remove all riders, take out stakes and unplug blower. Remove tube from blower and open other tube for deflating only. (Open zipper if your unit has one.)

Fold into thirds



ROLL FROM FRONT TO BACK (helps air escape through tubes as you roll it up)

# ENTER AT OWN RISK!

BUT ONLY IF AN ATTENDANT IS AT ENTRANCE!

---

## HOW TO SUPERVISE THIS RIDE:

1. You must instruct kids before they enter:

**REMOVE SHOES AND EYEGLASSES**

**NO GUM OR ANY SHARP OBJECT**

**NO FLIPS DOWN THE SLIDE!**

**STAY IN LINE AND WAIT FOR OPERATOR'S  
SIGNAL TO START**

2. If the unit deflates tell kids not to panic and have them exit the ride IMMEDIATELY.

Check the electrical plugs and tubes for the cause of air loss.

Check blower to see if air intake has been obstructed.

---

**ANYONE NOT FOLLOWING THE RULES WILL BE  
REMOVED FROM THIS RIDE!**



# HAVE A AND SAFE EVENT

---

## PATRON RESPONSIBILITY

There are risks in the participation in or on any amusement ride, device or attraction.

Patrons of an amusement ride, device or attraction – by participation – accept the risks which are posted.

Patrons have a duty to exercise good judgment and act in a responsible manner while using the amusement attraction and to obey all oral or written warnings, prior to and during participation.

Patrons have a duty to not participate on any amusement device or attraction while under the influence of drugs or alcohol or due to health conditions.

Patrons have a duty to properly use all safety equipment provided.

---

**DO NOT ENTER ANY INFLATABLE AMUSEMENT DEVICE IF OPERATOR IS NOT PRESENT, RAINING, WIND OVER 15-20 MPH, LESS THAN 40 ° OUT, AND AT LEAST 30 MINUTES AFTER ANY LIGHTNING OR THUNDER.**

---