

INFLATABLE DART INSTRUCTIONS



YOU WILL RECEIVE:

- 1.0 HP Blower Motor, drawing 10-15 amps
- 3 Flying Dart Balls
- Rolled up inflatable with straps
- (4) Stakes & Ropes (if on grass)
Call "Miss Dig" 811 before pounding stakes.
- If on asphalt, Buckets/weight anchors & tarp.
- 12 Gauge Extension cord. \$75 fee if not returned.
- \$75 cleaning fee IF returned Wet/Muddy



YOU NEED:

- Dedicated 15 amp circuit.
- Sledge Hammer
- Adult operator who enforces all rules.

Property of Fun Services®

NEVER

**Set up or operate
in rain, winds over 15-20
mph, or in temperatures
less than 40°!**

**SAFETY
FIRST!**



Installation and Set-Up

Area must be dry and free of debris (ie: sticks, stones, broken glass, etc.)

Position on a flat area approximately 15' x 15'

Unroll - you will be unrolling from the back to the front.



Inflatable must be anchored!

Hammer ASTM approved stake into ground and then tie strap from unit to anchor.

Stake should be within 12 inches from unit to prevent tripping. Stake should be 75% buried at no more than a 30 degree angle.

To test anchor, pull up with a firm lifting force to assure it is secure.

If your unit has a zipper on bottom (side) be sure to close when inflating!
(Open to deflate.)

Insert blower in either tube, it doesn't make any difference. Use the tube that is closer to the power source, maximum of 50 feet. Tie off the other tube securely. (If not tied already)



Turn on blower and leave running for period of use.
(inflation takes about 5 minutes)

Proper Deflation and Return

Remove all riders, take out stakes and unplug blower. Remove tube from blower and open other tube for deflating only. (Open zipper if your unit has one.)

Fold into thirds



ROLL FROM FRONT TO BACK (helps air escape through tubes as you roll it up)

HAVE A AND SAFE EVENT

PATRON RESPONSIBILITY

There are risks in the participation in or on any amusement ride, device or attraction.

Patrons of an amusement ride, device or attraction – by participation – accept the risks which are posted.

Patrons have a duty to exercise good judgment and act in a responsible manner while using the amusement attraction and to obey all oral or written warnings, prior to and during participation.

Patrons have a duty to not participate on any amusement device or attraction while under the influence of drugs or alcohol or due to health conditions.

Patrons have a duty to properly use all safety equipment provided.

DO NOT ENTER ANY INFLATABLE AMUSEMENT DEVICE IF OPERATOR IS NOT PRESENT, RAINING, WIND OVER 15-20 MPH, OR LESS THAN 40 ° OUT.
