

INFLATABLE PLINKO

Equipment:

- 1 Inflatable Plinko
- 6 Balls
- 4 Corner Stakes & Ropes
- 1 1.0 H.P. Blower, drawing 10-15 amps
- 1 12 gauge extension cord, \$75.00 fee if not returned
- 4 Buckets & Tarp if on cement
- \$75 cleaning fee IF returned Wet/Muddy

• **DO NOT SET UP IN RAIN OR HIGH WINDS ... SAFETY FIRST!**
• **NEVER TURN YOUR BACK ON INFLATABLES!**

Set-Up

1. Remove any debris from the set up area that may damage the unit. Take inflatable from bag, unroll the unit. Please double check for overhead utility wires.
2. Insert cone on blower into the air shoot on the back side of the unit. Plug in blower to a secure 15 amp outlet. You may use ONE 50 ft extension cord of 14 gauge or higher. Ensure that the zipper along side is zipped before inflating.
3. After the inflatable plinko is fully inflated, stake the corners with the ASTM approved stakes provided.



Take Down

1. Remove game balls from inflatable.
2. Make sure the area is clear and then unplug the unit.
3. After unit is fully deflated, fold sides in towards the center. Then roll from FRONT to back.



4. Insert inflatable plinko unit in bag.

NEVER

Set up or operate
in rain, winds over 15-20
mph, or in temperatures
less than 40°!

**SAFETY
FIRST!**



FUN REUNIONS

675 E, Capital Ave. • Bellevue, MI 49021 • 1-800-772-7587