



# INFLATABLE RADAR PITCH

## Equipment:

- |                                       |                   |
|---------------------------------------|-------------------|
| 1 Red Bag with Inflatable Radar Pitch | 1 Blower          |
| 1 Catcher Back Drop                   | 1 Black Radar Box |
| 4 Corner Stakes                       | 6 Tennis Balls    |

- DO NOT SET UP IN RAIN OR HIGH WINDS ... SAFETY FIRST!
- NEVER TURN YOUR BACK ON INFLATABLES!

## Set-Up


1. Remove any debris from the set up area that may damage the unit. Take inflatable from bag, unroll the unit. Please double check for overhead utility wires.

2. Insert cone on blower into the air shoot on the back side of the unit. Plug in blower to a secure 30 amp outlet. You may use ONE 50 ft extension cord of 14 gauge or higher.



3. After the radar pitch is fully inflated, stake the corners with the stakes provided.

4. In the two upper corners, hang the Catcher back drop by using the "O" clamps and secure the bottom corners by securing with the clamps.

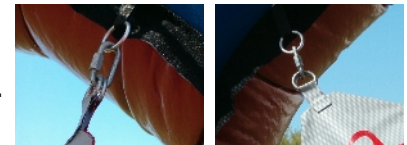

5. Hang the Black Radar Box in the Upper Right corner on the "O" clamps by using the rope provided.



6. Turn on the Radar Box by pushing the on button in the upper left corner of the box. It is possible that the box will turn off if not used for a period of time. Should this be the case, simply push the "On" button again.

## Take Down

1. Unhook the Black Radar Box.
2. Unhook the Catcher Back Drop by loosening "O" clamps and set out side of the back drop.
3. Make sure the area is clear and then unplug the unit.
4. After unit is fully deflated, roll sides in towards the center. Then roll from FRONT to back.



5. Insert inflatable radar pitch unit in bag.



**FUN** SERVICES

#1 Kids Place • Bellevue, MI 49021 • 1-800-772-7587 • [www.myfunservices.com](http://www.myfunservices.com)