MONEY MACHINE INSTRUCTIONS

YOU WILL RECEIVE:

- 1 HP Blower Motor drawing 10-15 amps
- 1/8 HP External Huffer
 Drawing 10-15 amps
- □ Carrying Bag
- □ Safety Glasses
- Fun Limiter Timer System
- □ Stuff-It Pouch

- □ Tethers & Carrying Bag
 - (4) Stakes (if on grass) Call "Miss Dig" 811 before pounding stakes.
- □ If on asphalt, weight anchors & tarp.
- 2 12 Gauge extension cords.
 \$75 each if not returned
- \$75 cleaning fee IF returned Wet/Muddy

YOU NEED:

- Two dedicated 15 amp circuits.
- Adult operator who enforces all rules.



<u>NEVER</u>

Set up or operate in rain, winds over 15-20 mph, or in temperatures less than 40°!

> SAFETY FIRST!



Installation and Set-Up

Area must be dry and free of debris (ie: sticks, stones, broken glass, etc.) Remove unit from storage bag.

Position on a dry and clean ground area approximately 10' x 10' for Cash Vault.






Money Machine must be anchored!

Hammer stake into ground and then tie strap from unit to anchor.

Stake should be within 12 inches from unit to prevent tripping. Stake should be 75% buried at no more than a 30 degree angle.

To test anchor, pull up with a firm lifting force to assure it is secure.

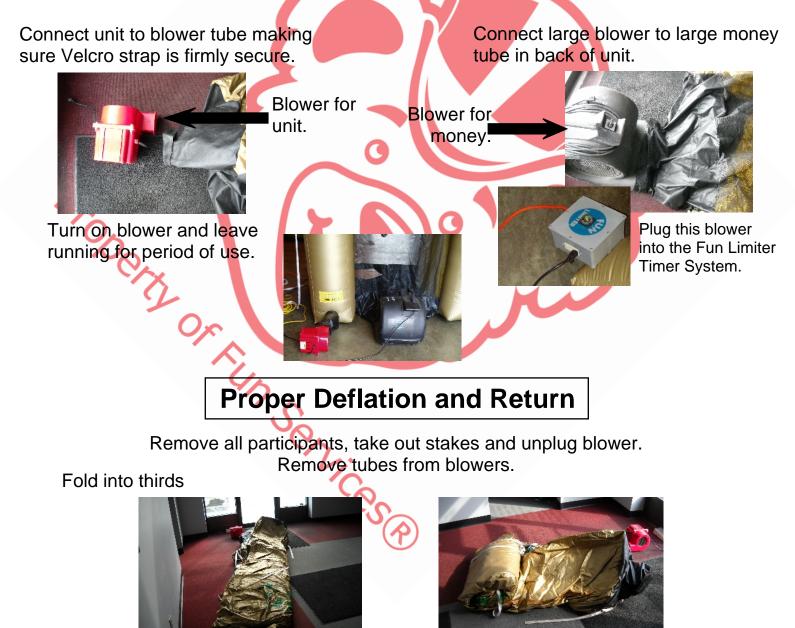

ROLL FROM FRONT TO BACK (helps air escape through tubes as you roll it up)

ENTER AT OWN RISK! BUT ONLY IF AN ATTENDANT IS AT ENTRANCE!

HOW TO SUPERVISE THIS RIDE:

1. Your organization is taking full responsibility for safe set up and operation of the inflatable as well as the "payout" of prizes.

2. Minimum height requirement: 48" Maximum height requirement: 76" One participant at a time.

If the unit deflates tell participant not to panic and have them exit the ride IMMEDIATELY. Then check the plugs and tubes for the cause of air loss.

ANYONE NOT FOLLOWING THE RULES WILL BE REMOVED FROM THIS RIDE! HAVE A FOR AND SAFE EVENT

PATRON RESPONSIBILITY

There are risks in the participation in or on any amusement ride, device or attraction.

Patrons of an amusement ride, device or attraction – by participation – accept the risks which are posted.

Patrons have a duty to exercise good judgment and act in a responsible manner while using the amusement attraction and to obey all oral or written warnings, prior to and during participation.

Patrons have a duty to not participate on any amusement device or attraction while under the influence of drugs or alcohol or due to health conditions.

Patrons have a duty to properly use all safety equipment provided.

DO NOT ENTER ANY INFLATABLE AMUSEMENT DEVICE IF OPERATOR IS NOT PRESENT, RAINING, WIND OVER 15-20 MPH, LESS THAN 40 ° OUT, AND AT LEAST 30 MINUTES AFTER ANY LIGHTNING OR THUNDER.