Twister





YOU WILL RECEIVE:

- □ 1 1.0 H.P. Blower Motor, drawing 10-15 amps
- ☐ Rolled up inflatable
- with straps
- ☐ Wheel / Spinner
- (4) Stakes & Ropes (if on grass)
 Call "Miss Dig" 811 before pounding stakes.
- If on asphalt, weight anchors & tarp.
- 12 gauge extension cord, \$75.00 fee if not returned.
- \$75 cleaning fee IF returned Wet/Muddy





NO JUMPING ON THIS UNIT - NOT A BOUNCER.

YOU NEED:

- Dedicated 15 amp circuit.
- Sledge Hammer
- Adult operator who enforces all rules.

NEVER

Set up or operate in rain, winds over 15-20 mph, or in temperatures less than 40°!

SAFETY FIRST!

Installation and Set-Up

Area must be dry and free of debris (ie: sticks, stones, broken glass, etc.)

Position on a flat area approximately 22' x 22' Unroll - you will be unrolling from the back to the front.







Twister must be anchored!

Hammer ASTM approved stake into ground 75% buried, no more than 30 degree angle and then tie strap from unit to anchor.

 
Stake should be within 12 inches from unit to prevent tripping.

To test anchor, pull up with a firm lifting force to assure it is secure.

Insert blower in either tube, it doesn't make any difference. Use the tube that is closer to the power source, maximum of 50 feet. Tie off the other tube securely. (If not tied already)



Turn on blower and leave running for period of use. (inflation takes about 5 minutes)





Proper Deflation and Return

Remove all riders and unplug blower. Remove tube from blower and open other tube for <u>deflating only</u>. (Open zipper if your unit has one.) Remove ropes from unit and stakes.



ROLL FROM FRONT TO BACK (helps air escape through tubes as you roll it up)

Fold into quarters

NOT A BOUNCER.

ENTER AT OWN RISK!

BUT ONLY IF AN ATTENDANT IS AT ENTRANCE!

HOW TO SUPERVISE THIS RIDE:

1. Do not mix younger and older children.

Limit each ride to allow jumping space for all:

Unit size 15' x 15' Ages: $\frac{1-6}{6}$ $\frac{7-11}{4}$ $\frac{12-17}{4}$

2. You must instruct all participants before they enter this ride:

REMOVE SHOES AND EYEGLASSES
NO GUM OR ANY SHARP OBJECT
NO FLIPS

NO WRESTLING, PILING, HORSEPLAY
NO BOUNCING, NOT A JUMPER
STAY AWAY FROM THE ENTRANCE

3. If the unit deflates tell kids not to panic and have them exit the ride IMMEDIATELY.

Check the electrical plugs and tubes for the cause of air loss. Check blower to see if air intake has been obstructed.

ANYONE NOT FOLLOWING THE RULES WILL BE REMOVED FROM THIS RIDE!



PATRON RESPONSIBILITY

There are risks in the participation in or on any amusement ride, device or attraction.

Patrons of an amusement ride, device or attraction – by participation – accept the risks which are posted.

Patrons have a duty to exercise good judgment and act in a responsible manner while using the amusement attraction and to obey all oral or written warnings, prior to and during participation.

Patrons have a duty to not participate on any amusement device or attraction while under the influence of drugs or alcohol or due to health conditions.

Patrons have a duty to properly use all safety equipment provided.

DO NOT ENTER ANY INFLATABLE AMUSEMENT DEVICE IF OPERATOR IS NOT PRESENT, RAINING, WIND OVER 15-20 MPH, LESS THAN 40 ° OUT, AND AT LEAST 30 MINUTES AFTER ANY LIGHTNING OR THUNDER.